

# NanoPi R2C Plus

固件：

[https://freeioe.oss-cn-beijing.aliyuncs.com/other/openwrt-rockchip-armv8-friendlyarm\\_nanopi-r2c-plus-squashfs-sysupgrade.img.gz](https://freeioe.oss-cn-beijing.aliyuncs.com/other/openwrt-rockchip-armv8-friendlyarm_nanopi-r2c-plus-squashfs-sysupgrade.img.gz)

使用方式：1. 下载固件文件 2. 烧写至tf卡 3. 插入设备启动 4. 写入eMMC(可选)

From:

<https://wiki.freeioe.org/> - FreeIOE 知识库

Permanent link:

[https://wiki.freeioe.org/hardwares/nanopi\\_r2c\\_plus/start?rev=1700216457](https://wiki.freeioe.org/hardwares/nanopi_r2c_plus/start?rev=1700216457)

Last update: **2023/11/17 18:20**

